



ATLAS[®] 8 REMOTE SENSOR REPLACEMENT INSTRUCTIONS:

1. Turn off power to Atlas[®] 8 before installing remote sensor.
2. Carefully attach the remote sensor to the Atlas[®] 8. Be careful not to bend the input pins on the connector, it could cause the sensor to function improperly.
3. DO NOT over tighten attachment screw.
4. Turn on power to Atlas[®] 8 and verify that remote sensor is functioning properly.
5. The remote sensor is FACTORY CALIBRATED. It is not necessary to calibrate the unit after installation.

LIMITED WARRANTY:

Titan Controls[®] warrants this product to be free from defects in materials and workmanship. The warranty term is for 1 year beginning on the date of purchase. Misuse, abuse, or failure to follow instructions is not covered under this warranty. Titan Controls[®] will, at our discretion, repair or replace the product covered under this warranty if it is returned to the original place of purchase. To request warranty service, please return the product, with original sales receipt and original packaging, to your place of purchase. The purchase date is based on your original sales receipt. Contact us at 888-808-4826 – Monday thru Friday – 8 to 5 PST if you need more information.