

Sun System® Assembly Instructions

Silver Sun - 1 Meter

Congratulations on purchasing the Silver Sun Reflector! This reflector offers the best of both vertical and horizontal reflector technology.

Make sure you have the following components:

- 7 triangle shaped reflective leaves.
- 1 triangle shaped reflective leaf with socket adjuster cutaway (see step 1).
- 1 octagon center piece with Socket & horizontal adjustment mechanism, and 2 hanging brackets attached.
- 2 chrome wire hangers.
- 1 bag of nuts and phillips bolts.

What you'll need:


- 1 Phillips screwdriver




The assembly process:

1. Hold octagon-shaped center piece with the reflective aluminum side down and the 2 hanger brackets up. The triangle shaped pieces should have the highly reflective surface on the inside facing the lamp area. Attach all phillips bolts from the inside pointed out, with the nuts on the outside of the reflector.


2. Start by attaching the triangle piece with the socket adjuster cutaway (see closeup below) to the octagon piece using one bolt and nut.

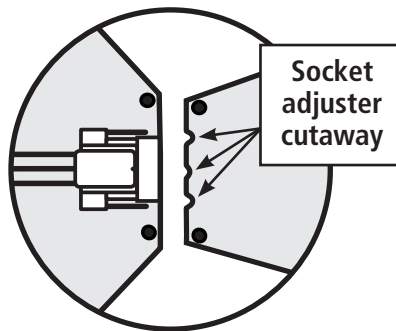


Attach bolt and nut here first

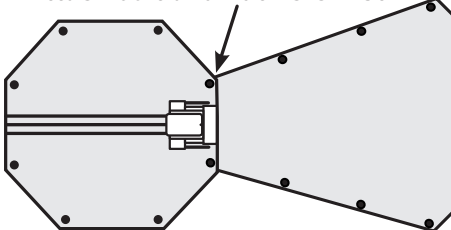


3. Working clockwise, keep attaching a leaf to each side of the octagon. You will need to flex the leaves slightly to get the holes to match up, because the leaves overlap, each bolt will be bolting 2 leaves to the octagon piece.

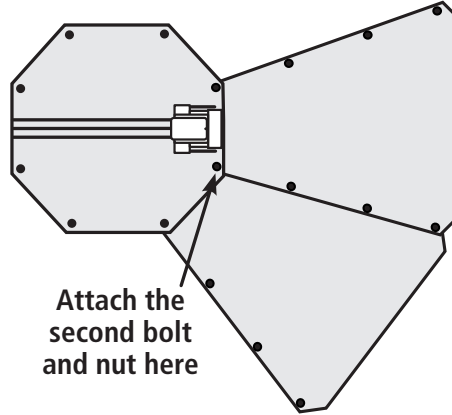


4. When finished, the unit should look as follows:

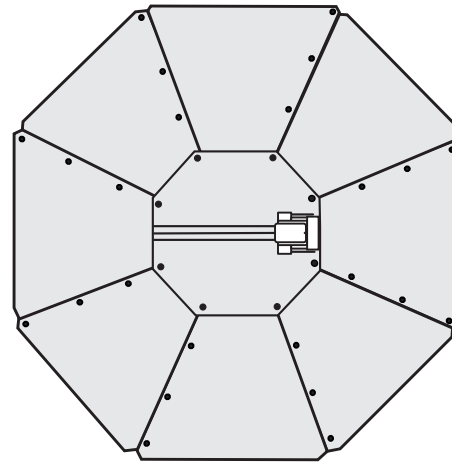


5. Now hang your reflector. Attach the 2 chrome wire hangers to the brackets on top of the reflector. Hang from ceiling using rope or chain.

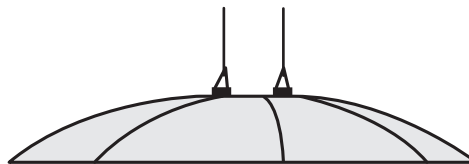

6. Screw in your lamp.

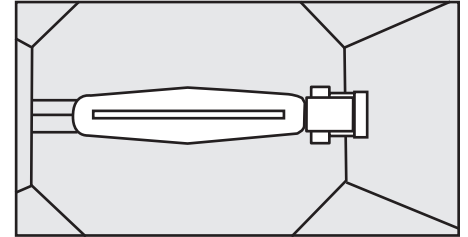

7. Plug your lamp cord into the receptacle on the ballast.

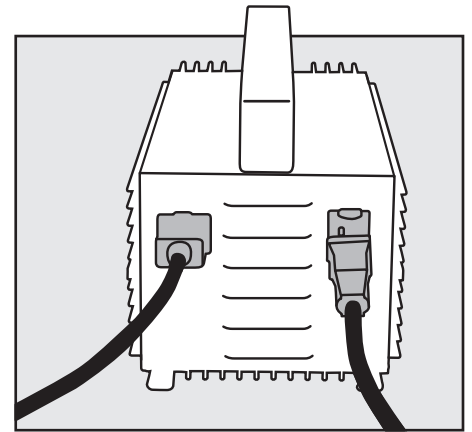

8. Plug ballast into the power supply.



Sunlight Supply, Inc.

National Garden Wholesale.

NOTE: Not for use with Metal Halide - HOR - horizontal position specific lamps